TOSHIBA

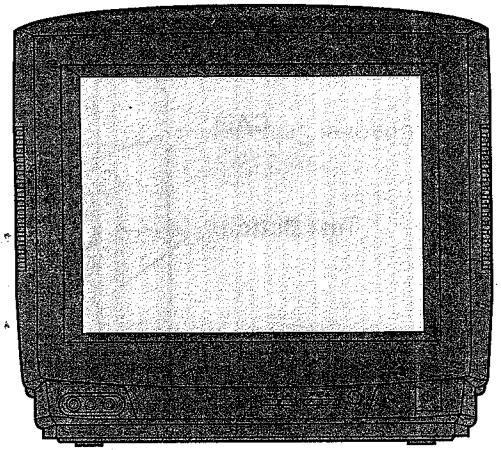

1450 Remote
1450 Remote with Text

OWNER'S MANUAL

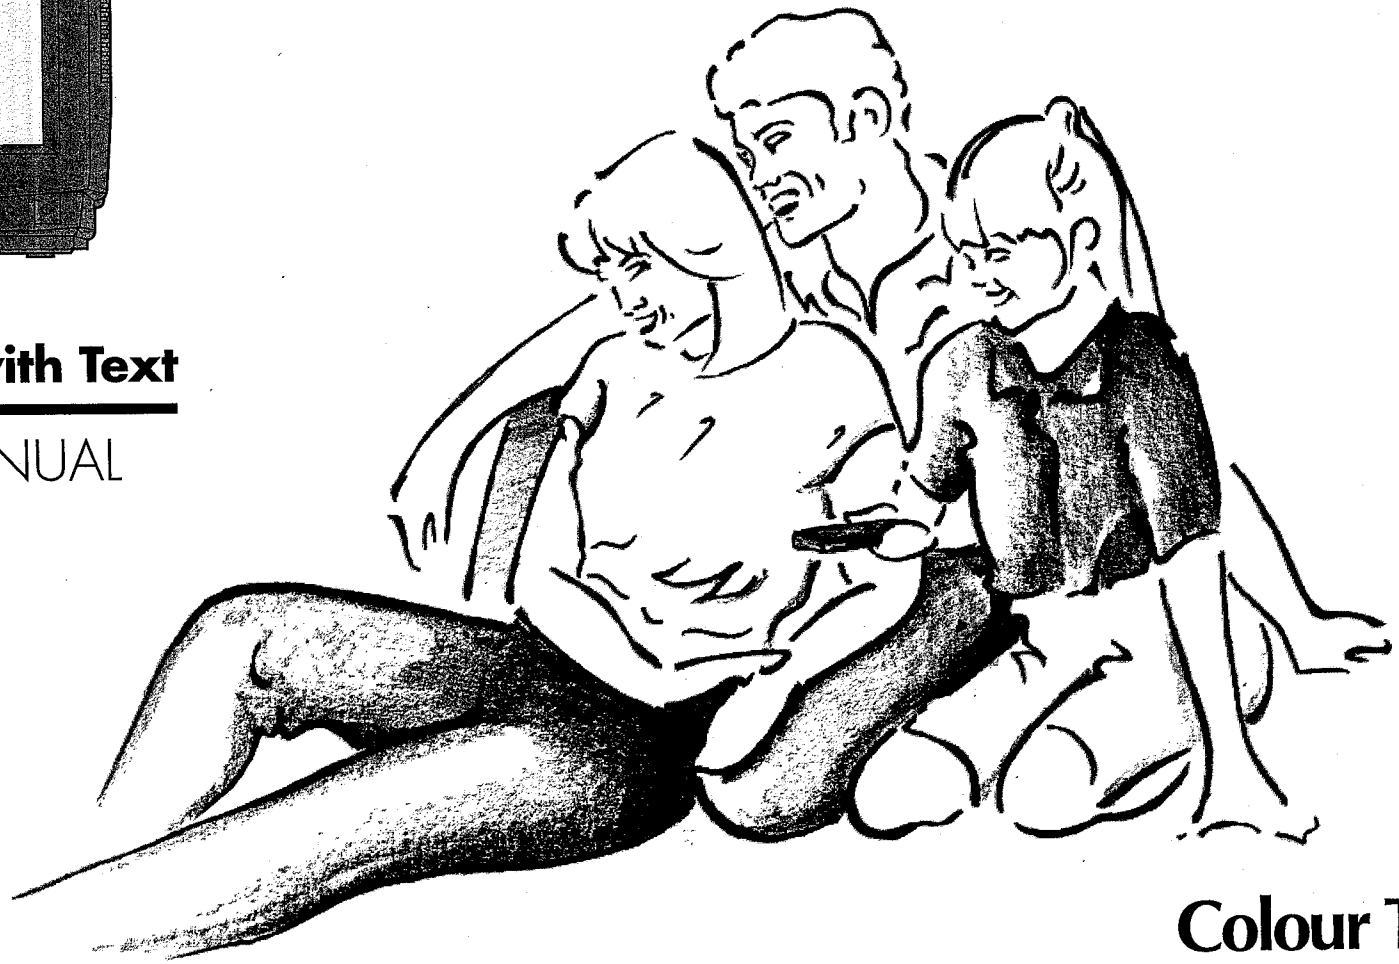

Colour Television

2259

TV Front Connections

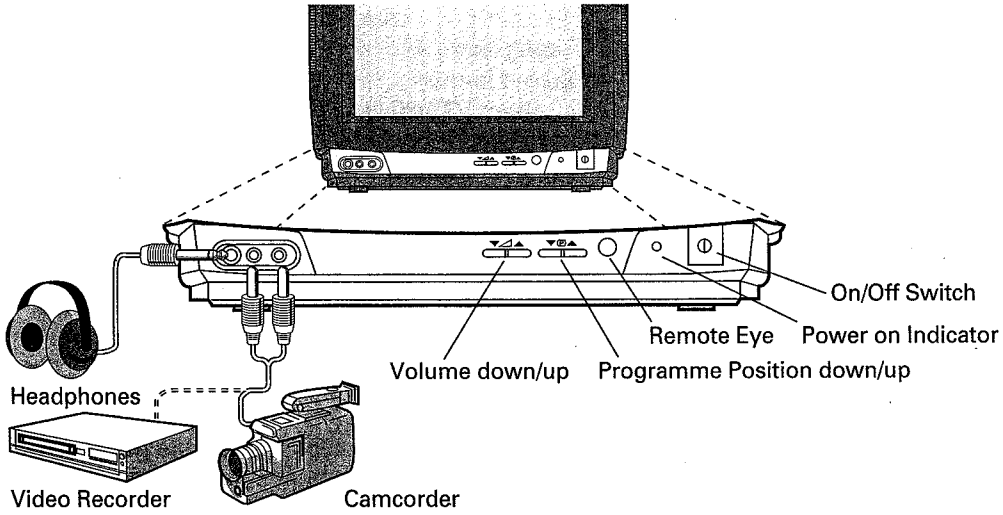

For your convenience you can now make connection of computer games, camcorders etc. much more easily. These are accessible through the sockets located on the front of the TV set.

TV Back Connections

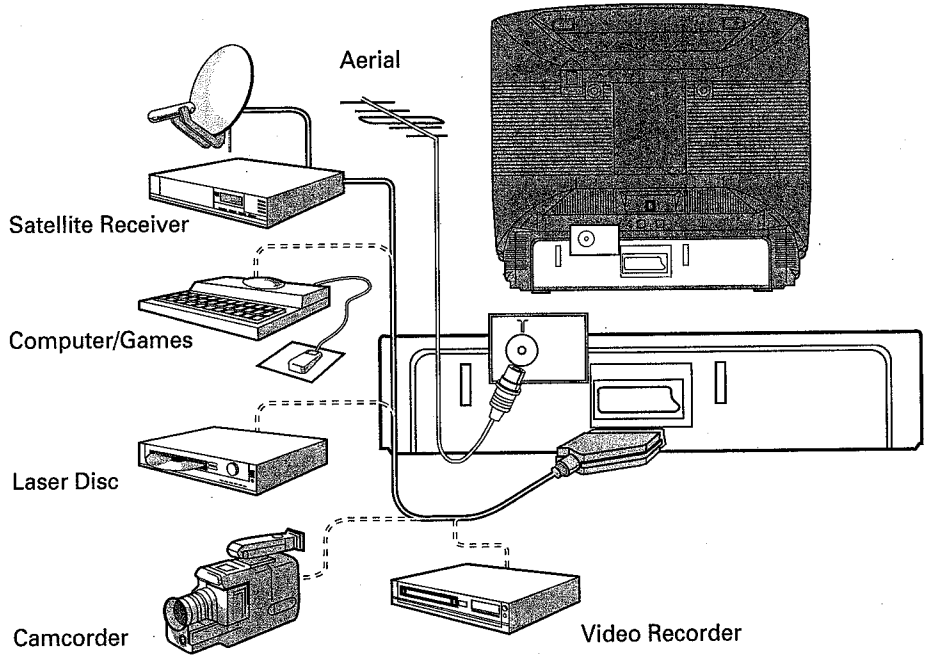

Positioning and connecting your TV

Positioning and connecting your TV
The following describes the initial set up procedure in order to operate all of the features of your TV.

Locate the television where direct sunlight does not impair the picture, soft and indirect lighting is recommended for comfortable viewing.

Leave at least 10cm around the top, sides and back of the television to allow adequate ventilation and sound response.

Avoid excessively warm locations to prevent possible damage to the cabinet or components. Do not expose to excessive moisture or humid conditions.

The mains supply required for this equipment is 220v to 240v AC 50Hz. Never connect to a DC supply or any other power source.

Aerial
To get the clearest picture and best text operation we strongly advise that you use either a roof-top or loft mounted aerial. Your local Toshiba dealer will advise you accordingly.

Connecting up
Connect the Aerial plug to the socket on the rear of the television. Connect the mains plug to a suitable power point and switch on.

Connecting a satellite receiver/video recorder

Automatic Selection Via Scart

For easier operation this television will automatically select pictures and sound from auxiliary equipment, when they are used, provided that they are connected via a scart lead, and that the auxiliary equipment has this feature. For example: Video recorders in playback mode.
To return to TV stations after automatic selection has taken place, simply press either the ⊖ button twice, or the desired programme position button.
If the auxiliary equipment does not have this feature, then use the ⊖ button to switch between auxiliary and TV.

If your auxiliary equipment does not have a scart socket. Connect the video, satellite receiver etc. to the TV via the aerial socket.

To tune your TV to a video recorder/satellite receiver: Press the 'Power On' button on the video recorder/satellite receiver and switch on the test signal, then tune as normal.

Press the MENU (▭) button on the remote control repeatedly until the >>> appears. Press the + button to commence the search.
When the signal is found, assign your chosen programme position(s).

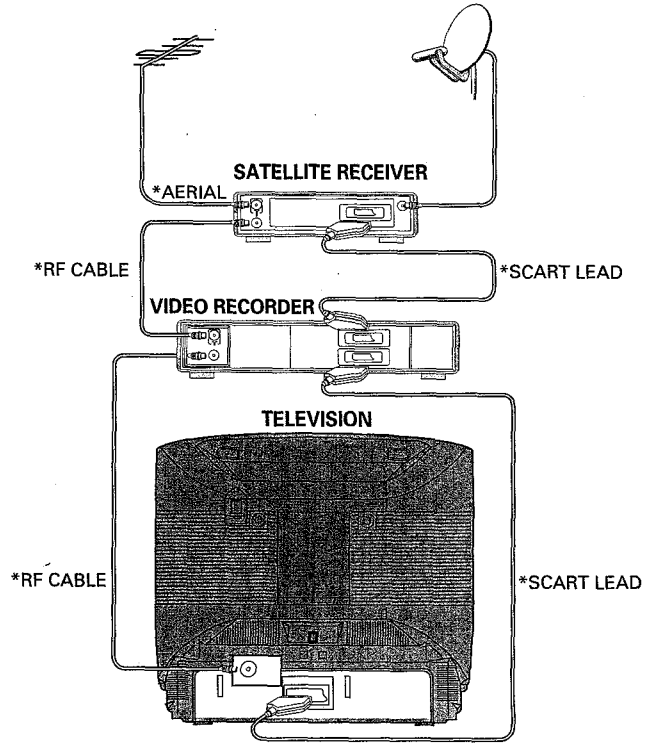

To connect your television to a video recorder with 2 scart sockets and to a satellite receiver with 1 scart socket:

1. Connect the aerial/R.F. cables as shown.
2. Connect the scart leads as shown.
3. This configuration will now enable you to record directly from the satellite receiver in stereo (if your equipment has this facility).

If your auxiliary equipment does not have the scart connections as shown, see below or contact your local dealer.

If your satellite receiver has 2 scart sockets and your video recorder has 1 scart socket:

1. Connect the aerial/R.F. cables as shown.
2. Connect one scart lead from the satellite receiver to the television. Connect another scart lead from the satellite receiver to the video recorder.
3. This configuration will now enable you to record directly from the satellite receiver in stereo (if your equipment has this facility).

Alternatively:

If your satellite receiver and your video recorder each have 1 scart socket you will need a switch to record in stereo from the satellite receiver:

1. Connect the aerial/R.F. cables as shown.
2. Connect the scart leads for both the satellite receiver and video recorder to a switch (for details contact your local Toshiba dealer).
3. Connect the switch to your television via a scart lead.
4. This configuration will now enable you to record directly from the satellite receiver in stereo (if your equipment has this facility) whilst watching a terrestrial TV programme.

* Not supplied with this television.
Full specification scart leads are required.

For your guidance

SAFETY TIPS: SOME DO'S AND DON'TS ON THE SAFE USE OF EQUIPMENT. PLEASE READ THE FOLLOWING POINTS CAREFULLY. THEY ARE OF A GENERAL NATURE, INTENDED TO HELP YOU WITH ALL YOUR ELECTRONIC CONSUMER PRODUCTS. SOME ITEMS MAY NOT APPLY TO THE GOODS YOU HAVE JUST PURCHASED.
This equipment has been designed and manufactured to meet international safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.
DO read the operating instructions before you attempt to use the equipment.
DO ensure that all electrical connections, including the mains plug, extension leads and inter connections, between pieces of equipment, are properly made and in accordance with the manufacturers instructions. Switch off and withdraw the mains plug when making or changing connections.
DO leave at least 10cm clearance around the top, sides and back of the TV to allow adequate ventilation and sound response.
DO be careful with glass panels or doors on equipment.
DON'T continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.
DON'T remove any fixed cover as this may expose dangerous voltages.
DON'T leave equipment switched on when it is unattended, unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.
DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.
DON'T listen to headphones at high volume, as such use can permanently damage your hearing.
DON'T obstruct the ventilation of the equipment for example, with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.
DON'T use makeshift stands and NEVER fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided, according to the instructions.
DON'T allow electrical equipment to be exposed to rain or moisture. ABOVE ALL - NEVER let anyone, especially children, push anything into holes, slots or any other openings in the case - this could result in a fatal electric shock - NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry.

A SELF HELP GUIDE FOR SIMPLE PROBLEM SOLVING

No Picture or Sound.
Check mains switches are on, press ⏻. Plug into a known working mains socket. 'Timer off' facility has operated.

Poor or no Picture.
Try a different TV station, check your aerial and connections. Adjust fine tuning.

Good picture but no sound.
Press 🔇 or press ◿ +.

If you have problems with text. (Text models only)
Go to the main index page of the text service and look for the User Guide. This will explain the basic operation of text in some detail.

Remote Control does not work.
Check the batteries.

Coloured Patches on Screen
These can be caused by magnetic interference. Switch off the TV for 10 minutes, then switch on again. The TV should now be de-magnetised.

Cleaning the screen and cabinet.
After turning off the power, clean the screen and cabinet with a soft, dry cloth. We recommend that you do not use any proprietary polishes or solvents on the screen or cabinet as this may cause damage.

2356 2609

Specifications

Models	1450 RN/TN
Receiving system	CCIR B/G-PAL VHF: 2-4, 5-12, S1-S20, S21-S41 UHF: 21-69
Programme Positions	60
Sound output (at 10% distortion)	1.5W
External Audio-Video input/output	B/G-PAL
AV in/out AV input front	Scart Full-21 pin Video/Audio
Headphone Socket	3.5mm
Dimensions	400 mm (W) 366 mm (H) 378 mm (D)
Power consumption Remote Remote with text	(at AC 220-240V 50Hz) 54W 56W
Weight	9.2 Kg (approx)
Accessories	1 Remote Control 2 Batteries (R6, AA)

© Toshiba Consumer Products (UK) Ltd
All rights reserved.
Reproduction in whole or part without written permission is strictly prohibited.

Toshiba Consumer Products (UK) Ltd
Northolt Avenue, Ernesettle, Plymouth, Devon, England PL52TS
Specification is subject to change without notice.

Originated by Kensa Illustration & Design, Saltash, Cornwall.
Printed by Deltor Communications Ltd, Torpoint, Cornwall.